

Drilling Instructions


Step 1. Attach Numbers to Plaque

Based on the number of numerals in your address, drill through the appropriate pre-punched holes using supplied drill bit. (see chart at right) Attach numbers to plaque with supplied screws.

If numbers are attached to plaque, skip to step 2.




If you have **One Numeral** in your address

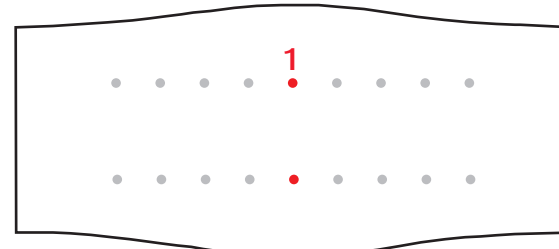


Drill holes marked **1** ONLY

If you have **Two Numerals** in your address

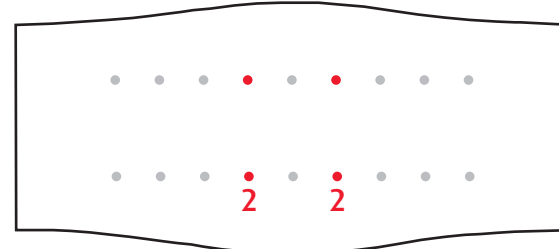


Drill holes marked **2** ONLY

If you have **Three Numerals** in your address

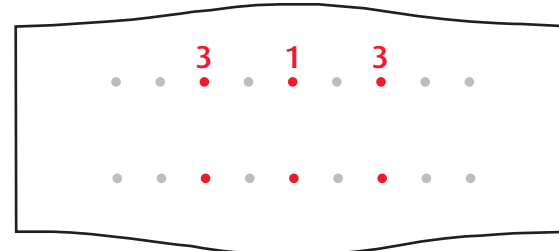


Drill holes marked **1 and 3** ONLY

If you have **Four Numerals** in your address

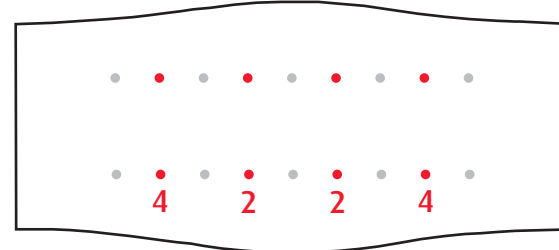

Drill holes marked **2 and 4** ONLY

If you have **Five Numerals** in your address

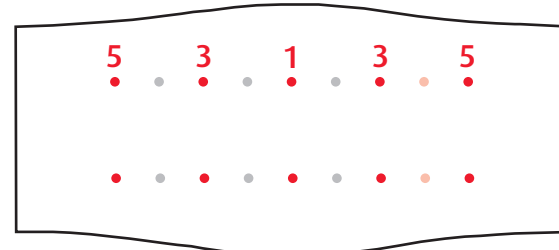

Drill holes marked **1, 3, and 5** ONLY

Step 2. Mount Plaque to Wall

Select location on wall. Level mounting template and tape to wall. **Drill pilot holes through drill targets.** Screw mounting screws into wall, leaving approximately 1/4" exposed. Hang plaque on wall. If desired, apply GE Clear Silicon II to back of plaque for permanent installation.

